



# Kinetic Wireless Doorbell



Self-Generating Power Kinetic Wireless Doorbell,  
1 Push Button (No Battery Required) and Plug-in  
Receiver, 38 Melodies IP44 Waterproof Door Entry  
Bell, White



No Battery  
Required



38  
Ringtones



IP44  
Waterproof



Adjustable  
Volume



Choose the favourite sound from

## 38 musical chime



**Self-Generating Power Kinetic Wireless Doorbell, 1 Push Button (No Battery Required) and Plug-in Receiver, 38 Melodies IP44 Waterproof Door Entry Bell, White**

**Product Features**

**No battery required at all:** You will never need a battery for both push-button and receiver, eliminating the hassles of having to change disposable batteries or recharge your units. Our self-generating power-designed doorbell makes life very easy.

**Suitable for any door:** Mount the transmitter outside your door and plug the receivers wherever you want, without worrying about hardwiring.

**Long-range:** With this self-powered kinetic doorbell, you can position the receivers up to 80 meters in the open air from the transmitter (40 meters if there are walls), giving you more flexibility for installation.

**Thirty-eight different ring tones:** You can choose the favorite sound from 38 musical chime options with just the touch of a button; select the volume you prefer from 4 levels (50-80db).

**Easy installation:** The kit includes one transmitter, one receiver, and a pack of screws & couplings for installation.



**Technical Specification:**

Product Type	: Self-power Wireless Doorbell
Outdoor Distance	: 80 m
Number of Tunes	: 38
Rated Voltage	: AC 85-260V / 50-60hz
Frequency	: 433Mhz
Transmitter Size	: 48×78×15 mm
Receiver Size	: 80×76×45 mm
Volume Level	: 4
Colour	: White
Work Temperature	: -10°~50°

## Keys

---

- 1. Volume Button:** If the volume key is not pressed once, the size of the ring will change once. There are four adjustment options.
  - 2. Ring Button:** hold it for 3 seconds. When the red light flashes slowly, the receiver will enter a pairing state, and then we should press the transmitter once to confirm it.
  - 3. Ring Button:** hold it for 6`7 seconds. When the red light flashes fast, all the paired information will be cleared.
  - 4. Ring Button:** choose chimes from 38 options. Press once to change.
- 



Volume Adjustable

1. Chime choose button  
2. Pairing Button



1. Ring Button  
2. Pairing Confirm Button

---

## Thank you for choosing ENER-J!

Customer satisfaction is our TOP priority. Please let us know how you felt about your experience.

Happy? We are so delighted that you are pleased with our product. Feel free to express your newfound joy! Share your experience by writing a review.

Not Happy? If you are not fully satisfied with the item you received, have any problems like damages or questions, please contact us. We typically respond within 24-48 hours.

## Stuck? Confused?

Contact our Technical Support team on:

T: +44 (0)2921 252 473 | E: support@ener-j.co.uk

Lines are open Mon - Fri (8am to 4pm)